

Universal photoelectric scanning head

Calmet CF106


Universal photohead

- Detecting of number of rotating disc turns in inductive electricity meters
- Detecting of LED impulses from electricity meters (without and with 8kHz modulation)
- Detecting of simulated disc marks on LCD displays of electricity meters
- Function of manual impulses triggering
- High immunity to sunlight
- Adjustable sensitivity level for LED mode
- LED detecting with the wavelength 450-1050nm
- Easy mounting to meter by Velcro or magnet
- Ability to work "by hand" without mounting to meter
- UCF106 Modular holder with extendable bracket (CF106H option) or EH02 Magnetic handle (CF106M option)
- Automatic teaching function
- Small dimensions and weight



Photoelectric scanning head Calmet CF106 together with electricity meter tester is designed for counting (detecting) of:

- pulses emitted by LED diodes of electronic energy meters (without and with 8kHz modulation) in typical colors: blue, green, yellow, red and infrared,
- · rotor's turns of inductive energy meters with black or red mark placed on the rotor,
- simulated disc marks on LCD displays of electronic energy meters,
- manually triggered impulses.

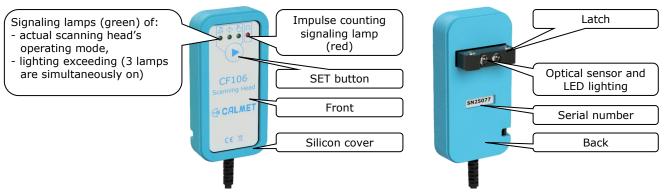

Scanning head has 3 operating modes, which are signaled by lightning lamps:

- 🗗 LED for electronic meters with LED without and with 8kHz modulation,
- ROTOR for inductive meters with rotor and for electronic meters with simulated disc mark on LCD display,
- MANUAL for manually counting of impulses (Start/Stop push button function).

SET ▶ button enables:

- changing the operating mode:
 - > press and hold the SET > button (after 2 seconds begins the change of operating mode),
 - > wait until the lamp of required operating mode will start to shine,
 - > release the SET > button,
- changing the sensivity level of the photohead working in the LED mode [↑]:
 - ▶ press SET ▶ button changes the sensitivity of the photohead, in turn:
 - The brightest LED maximum sensitivity,
 - Darker LED medium sensitivity,
 - The darkest LED minimal sensitivity,
 - After starting the power supply or after changing the mode, the brightest diode is automatically set, i.e. the maximum sensitivity of the photohead.
- - > mount the scanning head on the meter's case,



- press the SET ► button,
- > wait for the full rotor's turn or LCD spot blinking,

Warning: teaching mode lasts maximum 1 minute. In this time at least 1 rotor's turn or 1 LCD spot blinking is required.

- manual triggering of pulses for MANUAL [®] mode:
 - ▶ press the SET ► button when the impulse from meter is observed.

CF106 Photohead's standard equipment contains:



To perform a test of electricity meter (mounted to meter by self adhesive Velcro) one should:

- stick the Velcro on meter's case (A) over observed spot (LED)
- fix the EH01 mounting handle to Velcro so that the observed spot (LED) is in the middle of scanning head's mounting handle window (B)
- mount the scanning head to mounting handle by pushing the scanning head's latch into window of mounting handle (C)
- choose the operating mode (SET ▶ button)



To perform a quick test of electricity meter (work "by hand" without mounting to meter) one should:

- place the EH01 mounting handle on meters case so that the observed spot (LED) is in the middle of scanning head's mounting handle window (A)
- by holding the mounting handle in a fixed position mount the scanning head to mounting handle by pushing the scanning head's latch into window of mounting handle (B)
- choose the operating mode (SET ▶ button)



Warning: In case all 3 signaling lamps are simultaneously on (lighting exceeding), then one should move away the scanning head from the front of meter's case or place it at an angle.

Technical parameters of scanning head

reclinical parameters of scanning nead				
Power Supply	5V <u>12V</u> 15V			
Supply current	Max 30mA			
Output	Open collector (NPN), max 24V/100mA			
Reading distance	045mm			
Reading angle	0±15°			
-	LED	2500Hz		
	LED modulated 8kHz	800Hz		
Max frequency of impulses	Inductive meter	40Hz		
	Simulated disc mark on LCD	40Hz		
	Manual triggering	5Hz		
LED 8kHz modulation range	6kHz <u>8kHz</u> 10kHz			
Connector type	tor type Plug C091A T3475-001 Amphenol			
Cable length	2.	5m		

www.calmet.com.pl Universal scanning head CF106 Data sheet EN 2021-06 2/4




Pins description

- 1110 1110 1111			
Pin	Signal	Description	
1, 2, 6	NC	Not connected	
4	GND, OUT LO	Ground, impulse output open collector	$\frac{2}{c}$
5	VCC	Power supply	
3, 7	OUT HI	Impulse output open collector] \




CF106H scanning head (option) includes a modular holder UCF106 which consists of:

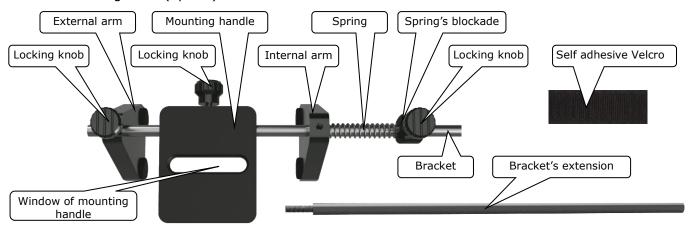

To mount the scanning head on meter using UCF106 holder and perform a test one should:

- choose the mounting position of scanning head (vertical or horizontal)
- block with locking knob the external arm outside the meter's contour (A)
- set the internal arm inside the meter's contour (B)
- block with locking knob the spring's blockade (C)
- pull away the internal arm (D) and mount the holder on meter
- set the mounting handle so that the observed LED diode (rotor or spot) is placed in the middle of scanning head's mounting handle window (E)
- block the mounting handle with locking knob (F)
- mount the scanning head to holder by pushing of scanning head's latch into window of mounting handle (G)
- choose the operating mode (SET ► button)
- for the meter with rotor or LCD (ROTOR mode) start the automatic teaching (SET button).

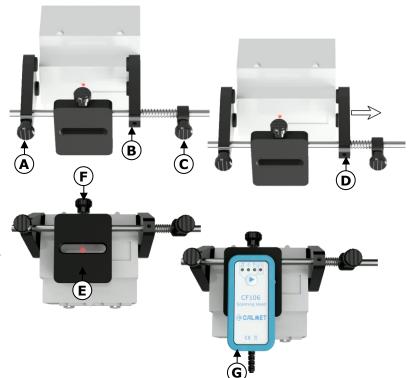

Warning: In case all 3 signaling lamps are simultaneously on (lighting exceeding), then one should move away the scanning head from the front of meter's case or place it at an angle.

Technical parameters of holder

Adjustment range of holder mounting on the meter's case	45190mm (single bracket) 45420mm (double bracket)
Adjustment range of distance between scanning head and the front of meter's case	035mm (by changing the mounting of bracket's arm on the meter's case)

www.calmet.com.pl Universal scanning head CF106 Data sheet EN 2021-06 3/4

CALMET Smart Calibration Devices

Typical applications:



Test of electricity meter with LED (scanning head mounted using EH01 Handle by self adhesive Velcro)



Quick test of electricity meter with rotor (work "by hand" without mounting to meter)



Test of electricity meter with LED (scanning head mounted using UCF106 Holder – **CF106H option**)



Test of electricity meter with LED (scanning head mounted using EH02 Magnetic handle – **CF106M option**)

Calmet CF106 Universal photoelectric scanning head's equipment*) All completed Calmet CF106 Photohead's set consists of:

- Calmet CF106 Photohead,
- EH01 Velcro mounting handle,
- Self adhesive Velcro (10pcs).

Optionally for Calmet CF106 Photohead are available:

 UCF106 photo head's holder for inductive meter and meter with LED,



EH02 Magnetic mounting handle



*) CF106 photo heads are available made with connectors adapted to work with devices of different manufacturers (Information Note No17 - Table of Connectors for CF106 Scanning Head).

Calmet sp. z o.o.

Kukulcza 18, 65-472 Zielona Gora, Poland Phone +48 68 324 04 56 Fax +48 68 324 04 57

E-mail: mail@calmet.com.pl Web access: http://www.calmet.com.pl

www.calmet.com.pl Universal scanning head CF106 Data sheet EN 2021-06 4/4